

INSTALLATION & OPERATING INSTRUCTIONS

GROUND ANCHOR

TB52




Question about your product? Visit www.californiaumbrella.com and chat with us today.

COMPONENTS

Ground Anchor Box


1

TB52 Gound Anchor

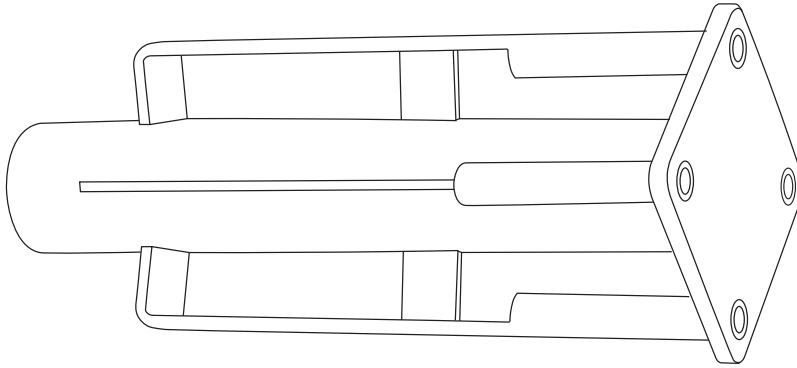

2


Bolts x4

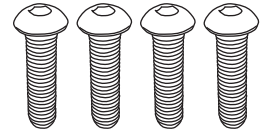

INSTALLATION


Step 1

Model you concrete area with dimensions of 32" x 32".

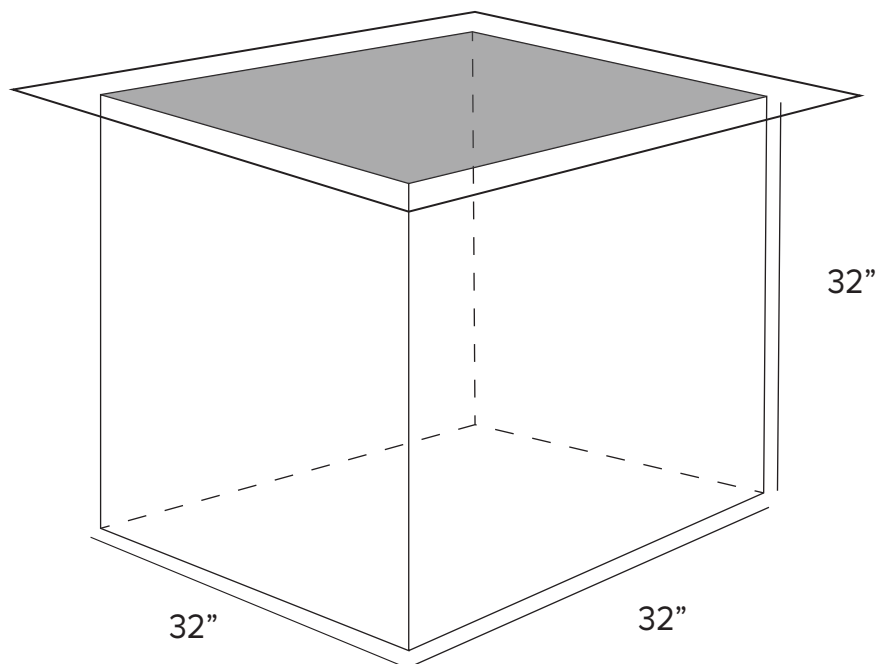

Step 2


Insert the Bolts into the threads of the Ground Anchor

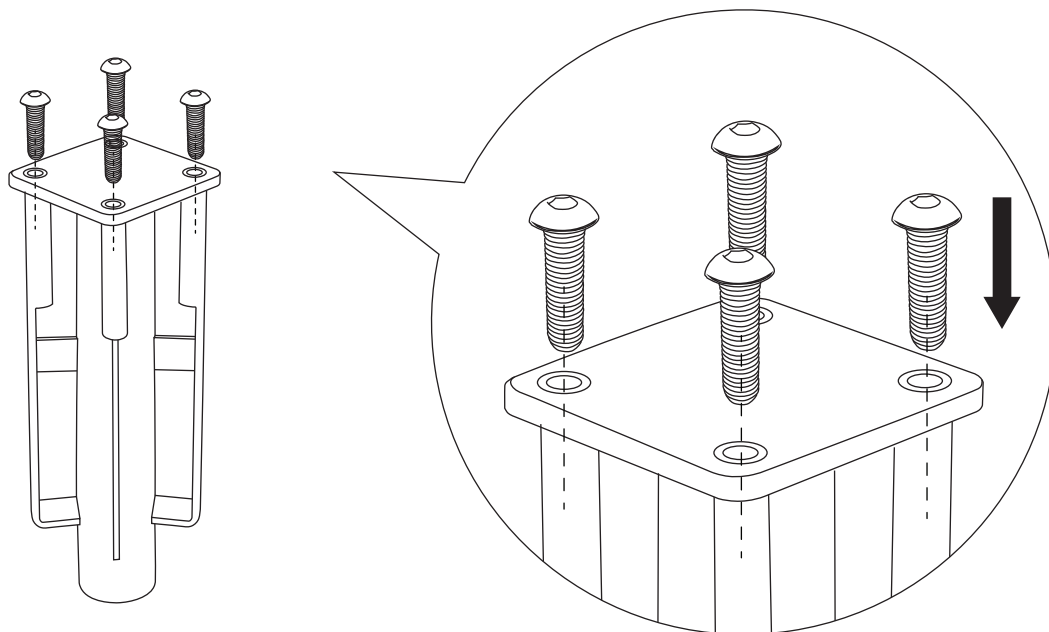

INSTALLATION


Step 4

Pour concrete and insert the Ground Anchor into the center of the concrete area.

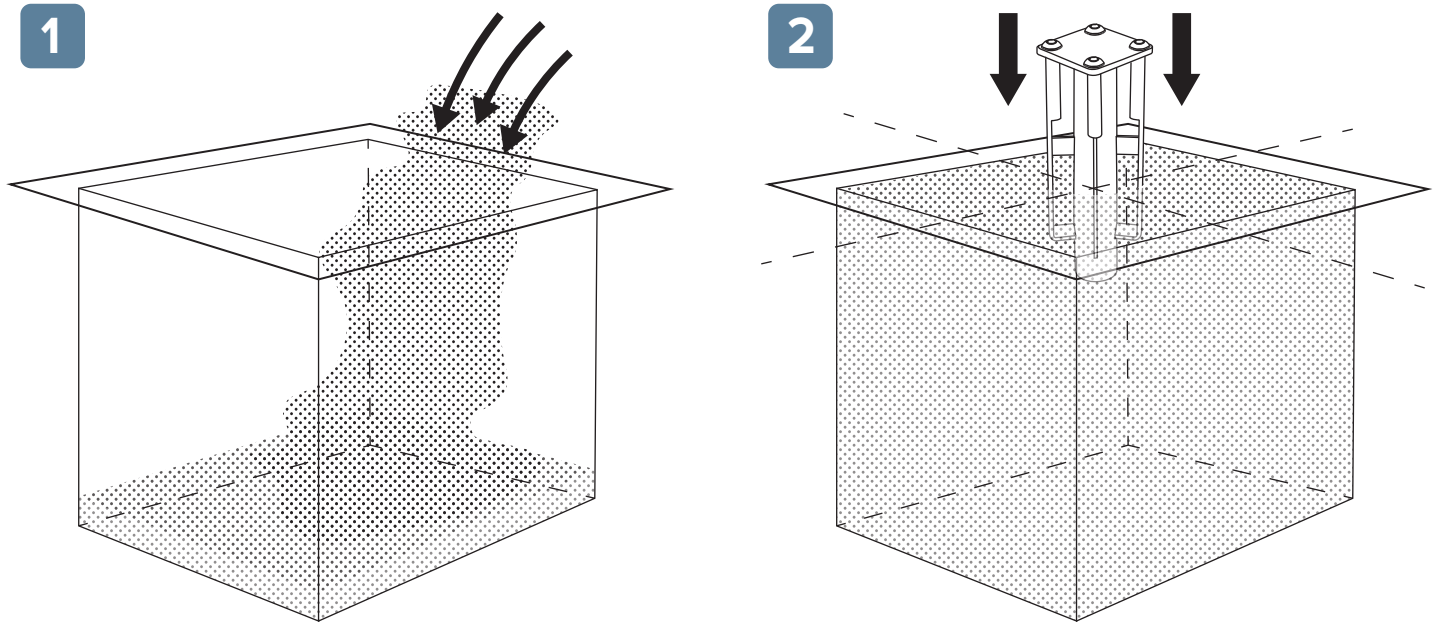

WARNING


In case for Cantilever Umbrella, be sure that the Ground Anchor threaded holes are in-line with the direction you want the cantilever to be facing.

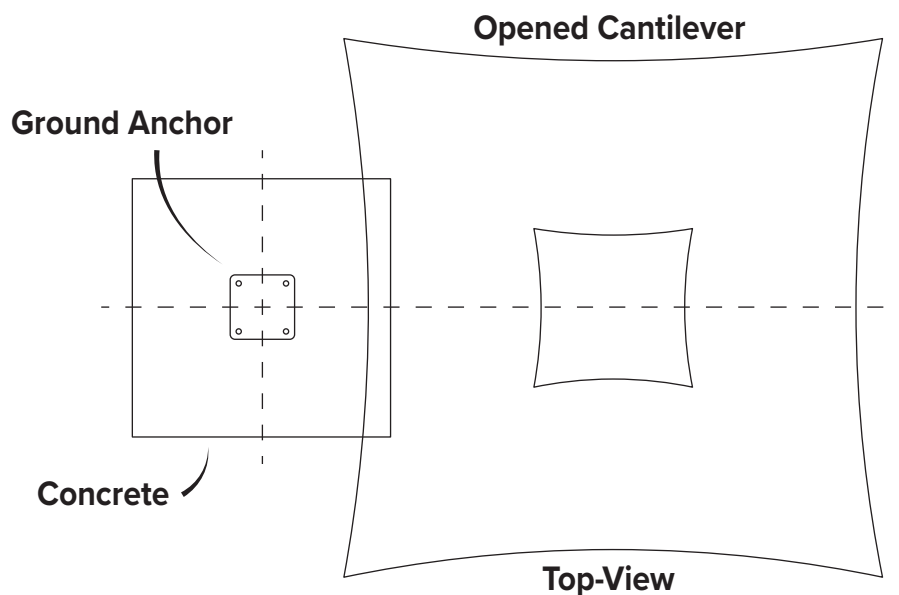

INSTALLATION


Step 5

Ensure that the top of your Ground Anchor is level with the top of concrete.

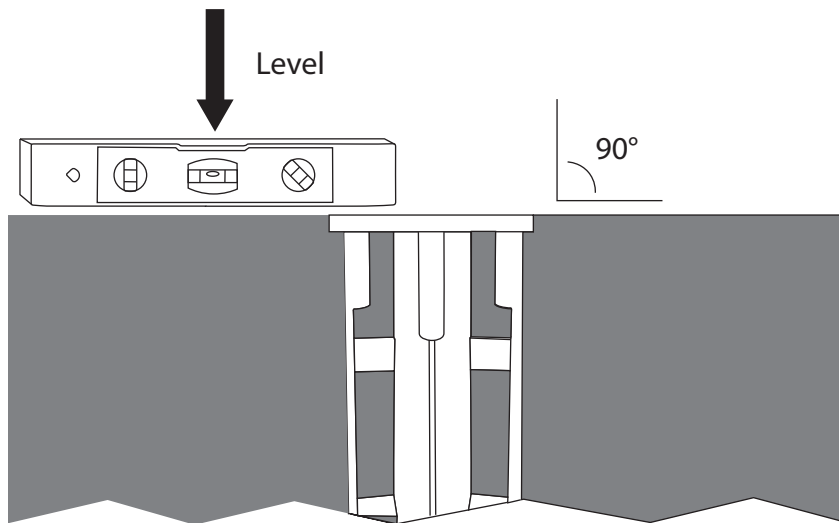

Step 6

After the concrete has cured, remove our bolts from the threaded holes of the Ground Anchor.

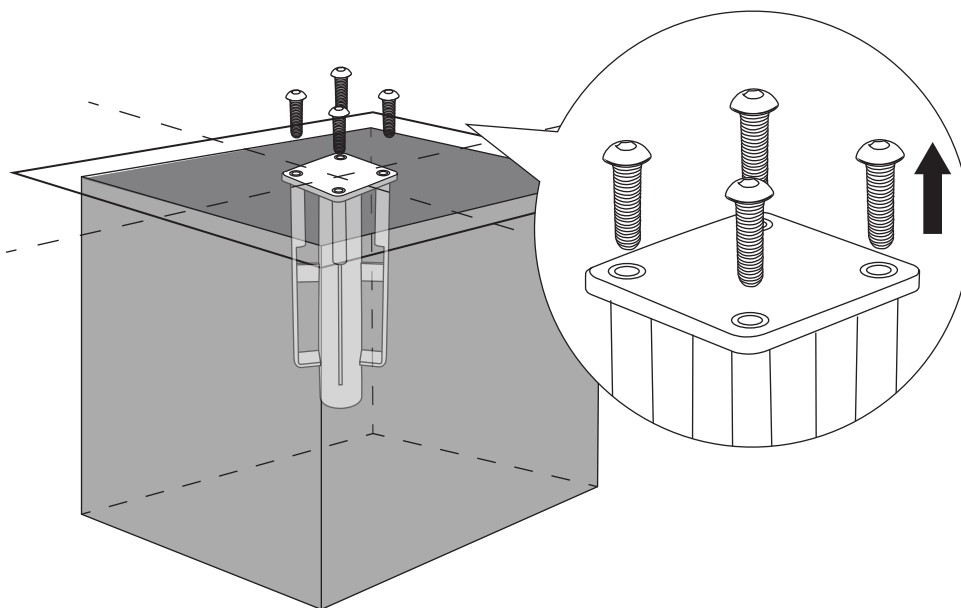

INSTALLATION

Step 7

Place your Base Tube (sold separately) on top of your Ground Anchor and securely tighten the bolts through the Base Tube holes into the Ground Anchor Threads.

